

S E R V I C E N O T E

SUPERSEDES: NONE

**4156B Semiconductor Parameter Analyzer  
04155-66541/04155-69541 CPU Assembly**

Serial Numbers: See below

**New firmware fixes incorrect measurement status problem**

**Duplicate Service Notes:**

4155B-08      Serial Numbers: 0000A00000/JP10E00392  
4156B-08      Serial Numbers: 0000A00000/JP10E00442

**To be Performed by:** Agilent-qualified personnel

**Situation:**

In the 4142B mode (US42) of the FLEX language environment, incorrect measurement status is returned when the status is other than "Normal".

*Continued*

DATE: May 1999

ADMINISTRATIVE INFORMATION

SERVICE NOTE CLASSIFICATION:			
<b>MODIFICATION RECOMMENDED</b>			
ACTION CATEGORY:	<input type="checkbox"/> IMMEDIATELY <input checked="" type="checkbox"/> ON SPECIFIED FAILURE <input type="checkbox"/> AGREEABLE TIME	STANDARDS:	LABOR 0.5 Hours
LOCATION CATEGORY:	<input type="checkbox"/> CUSTOMER INSTALLABLE <input type="checkbox"/> ON-SITE <input checked="" type="checkbox"/> SERVICE CENTER	SERVICE INVENTORY:	<input type="checkbox"/> RETURN <input type="checkbox"/> SCRAP <input type="checkbox"/> SEE TEXT
AVAILABILITY:	PRODUCT'S SUPPORT LIFE	USED PARTS:	<input type="checkbox"/> RETURN <input type="checkbox"/> SCRAP <input type="checkbox"/> SEE TEXT
AUTHOR: MO	ENTITY: 3300	AGILENT RESPONSIBLE UNTIL: May 2001	
		ADDITIONAL INFORMATION:	

**Solution/Action:**

Update the HOSTC firmware to 2.03 by using the following procedure:

1. Go to the following location:

`ftp://hpyidmk.jpn.hp.com/dist/dc_para/4155B/firmware/Rev02.03/`

2. Save the 'h02\_03-s03\_06.zip' file to a local temporary directory. (Use the BINARY transfer mode to get the file.)
3. Extract directories and files from the 'h02\_03-s03\_06.zip' file, which is a 'zip' type compressed file. Four directories (disk1, disk2, disk3, and disk4) are created.

The contents of the four directories are also available on the ftp server:

`ftp://hpyidmk.jpn.hp.com/dist/dc_para/4155B/firmware/Rev02.03/DISK1/  
DISK2/  
DISK3/  
DISK4/`

4. Copy the files in each directory to a 3.5-inch disk and label the disk. For example, after you have copied the files in the 'disk1' directory, label it "disk1".
5. Turn off the 4155B/4156B. 6. Insert "disk1" into the 4155B/4156B and turn on the 4155B/4156B.
7. Press the {Yes} primary softkey to start the firmware update.
8. Replace the disks according to the displayed instructions. You use the disks in the following sequence:

`disk1 -> disk 2 -> disk3 -> disk1 -> disk4`

Note that "disk1" is used twice.

9. Wait until the update process completes.
10. Remove the disk and cycle the power.
11. Check the HOSTC and SMUC revisions on the [System]-{Config} page.

To do this update, 41501A,B SMU/PGU Expander is not necessary.