# S E R V I C E N O T E

SUPERSEDES: 5DX-95-06 Dated March 21, 1995

## **HP 5DX Structural Process Test System**

### Proper Method for Powering off the HP 5DX System

#### **Situation / Solution:**

This is the proper power down procedure for the HP 5DX. Using this method reduces the risk of data loss or X-ray Tube damage

- 1. Unload any panels from the machine.
- 2. Select CONFIGURE from the System Access menu.
- 3. Select LONG TERM SHUTDOWN.
- 4. Select the OK box at the "Prepare system to be powered off" message.
- 5. Select SHUTDOWN from the System Access menu.
- 6. Select LONG TERM SHUTDOWN.
- 7. The monitor and keyboard will change to the file server computer.

Continued

DATE: September 1997

#### ADMINISTRATIVE INFORMATION

| SERVICE NOTE CLASSIFICAT | ΓΙΟΝ:   |                         |
|--------------------------|---------|-------------------------|
| INFORMATION ONLY         |         |                         |
| AUTHOR:                  | ENTITY: | ADDITIONAL INFORMATION: |
| KP                       | 0982    |                         |
|                          |         |                         |
|                          |         |                         |

© 1997 HEWLETT-PACKARD COMPANY PRINTED IN U.S.A.



Page 2 Service Note 5DX-07

- 8. If TRCMDPRO is running hit the ESC key to stop it.
- 9. Type CONSOLE [Enter] at the DOS command line prompt.
- 10. At the colon prompt (:), type DOWN [Enter]
- 11. Use the main circuit breaker at the back of the Electronics Cabinet to turn off power.
- 12. Follow the "Proper HP 5DX Power On Procedure" to bring power up.