

MODIFICATION RECOMMENDED –
CORRECTS MANUFACTURING OR DESIGN DEFECTS

E8361A-05A

S E R V I C E N O T E

Supersedes:
E8361A-05

E8361A PNA Microwave Network Analyzers

Serial Numbers: ALL

**Intermittent 10 GB HDD electrical problem can cause PNA HDD-related failures.
Replace 10 GB HDD with a new 40 GB HDD.**

To Be Performed By: Agilent-Qualified Personnel

Parts Required:

Part Number	Description	Qty.
E8356-60076	HDD for E8356/7/8A with 266 MHz CPU	1
-OR-		
E8801-60065	HDD for: E8356/7/8A with 500 MHz CPU E8801/2/3A, N3381/2/3A, E8361/2/3/4A, E8362/3/4B	1

ADMINISTRATIVE INFORMATION

SERVICE NOTE CLASSIFICATION:			
MODIFICATION RECOMMENDED			
ACTION CATEGORY:	IMMEDIATELY ON SPECIFIED FAILURE X AGREEABLE TIME	STANDARDS: LABOR: 0.5 Hours	
LOCATION CATEGORY:	CUSTOMER INSTALLABLE X ON-SITE X SERVICE CENTER	SERVICE INVENTORY: N/A	USED PARTS: X RETURN SCRAP SEE TEXT
AVAILABILITY:	PRODUCT'S SUPPORT LIFE	AGILENT RESPONSIBLE UNTIL: January 1, 2007	
AUTHOR: MF	PRODUCT LINE: WN		
ADDITIONAL INFORMATION: This Service Note applies to the following PNA models: E8356/7/8A, N3381/2/3A, E8801/2/3A, E8361/2/3/4A, and E8362/3/4B.			

© AGILENT TECHNOLOGIES, INC. 2006
PRINTED IN U.S.A.



March 24, 2006

Situation:

Some PNAs are experiencing reliability issues due to an intermittent electrical failure on a circuit board inside the 10 GB HDD. This can cause operating system failures to occur. These failures are eliminated by replacing the 10 GB HDD with a 40 GB HDD.

Solution/Action:

Any time a PNA with a 10 GB HDD is serviced or calibrated, replace the 10 GB HDD with a 40 GB HDD. This will help prevent future HDD-related failures.

Refer to the PNA Service Guide for instructions on replacing the HDD. To view this Service Guide information online, use the following steps:

1. Go to <http://na.tm.agilent.com/pna>
2. Click on the hyperlink Instrument Documentation and Manuals.
3. Under the heading "Title", find the Service Guide for your PNA model.
4. Under the heading "Document", click on the PDF icon for your Service Guide.
5. When the PDF of the Service Guide is displayed, look at the bookmarks in the left column. Expand the Contents section by clicking on the plus sign next to its bookmark.
6. Scroll through the Contents section bookmarks to locate "Repair & Replacement Procedures."
7. Click on the title/hyperlink for the section "Removing & Replacing the Hard Disk Drive Assembly."
8. Follow all instructions including those in the subsection "Post-Repair Procedures."