

E6607A EXT Wireless Communications Test Set

Non-signaling Test Overview

Application Note



EDGE EVO
4G
cdma2000
HSPA+
QPSK
RevLink CDP
W-CDMA



GSM
1xEV-DO



1 Error Summary			
EVM	= 671.77	m%rms	at
EVM Pk	= 2.7907	%	at
Data EVM	= 678.95	m%rms	
3GPP-defined QPSK EVM	= ---		
3GPP-defined 16QAM EVM	= 676.27	m%rms	
3GPP-defined 64QAM EVM	= ---		
RS EVM	= 641.74	m%rms	
RS Tx. Power (Avg)	= ---		
OFDM Sym. Tx. Power	= ---		
Freq Err	= 276.54	Hz	
SyncCorr	= 99.972	%	us
Common Tracking Error	= 116.62	m%rms	
SymClk Err	= -0.11007	ppm	
...			



Agilent Technologies

Emergence of Non-Signaling Test

Traditionally, the primary control for the cellular phone device during signaling test required over-the-air (OTA) protocol. Test equipment emulated a base station that the device responded to and then provided the capability to measure key RF parameters on both the uplink (UL) and downlink (DL).

In non-signaling test, the focus is not on the test set's OTA signal emulation but rather the direct control of the device under test (DUT), typically over a serial connection and through use of chipset-specific device drivers. The direct communication enables the use of the available non-signaling test mode in order to test the cell phone in a more efficient manner. **Figure 1** compares the approach using a signaling and non-signaling one box test (OBT).

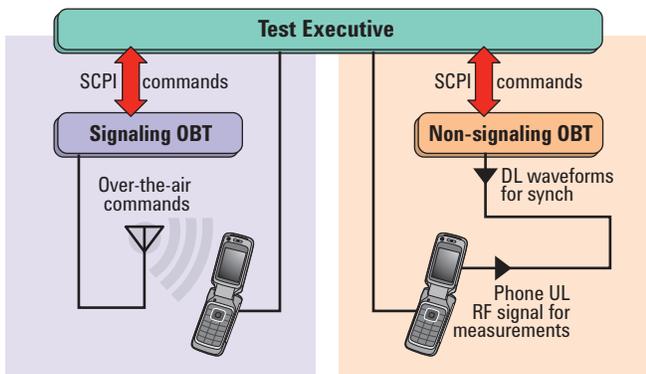


Figure 1:
Comparison of control commands for signaling and non-signaling OBTs

Around the turn of the millennium, non-signaling test applications were designed into OBT solutions. For example, the idea of using predefined transmissions in a device test mode is widely adopted in calibration techniques, such as Fast Device Tune. Now, there is significant interest in optimizing the verification stage of the test plan by exploiting new non-signaling test modes and capabilities in next-generation cellular devices.

The importance of chipset test modes

Non-signaling test techniques are only made possible by having appropriate chipset control over the device, referred to as test modes. A test mode can be thought of as a proprietary engineering mode within a device, which is specifically designed to fulfill the requirements of the test. Use of the test mode is available for programming via device drivers into the software test script or test executive. The test-mode configuration puts the device into a known state, allowing test equipment to measure predefined transmission patterns, usually power and frequency as a minimum. Test mode control offers engineers the potential to shorten the test development time and test time of cellular devices in which multiple bands and formats are combined into single chipsets or products.

As new chipsets are designed, test vendors and chipset vendors are looking for new test techniques from test equipment, chipset designers and test vendors must cooperate in the development of non-signaling test modes and the corresponding next-generation test equipment for cellular technologies. By leveraging existing silicon-vendor relationships, test-equipment manufacturers can provide test equipment that fulfills the potential of non-signaling-oriented test.

Transition to Fast Sequenced Non-Signaling

The evolution in non-signaling technology has led to chipset test modes with varying degrees of capability for a given proprietary test mode within a particular manufacturer's cell phone. The potential to which non-signaling use reduces test time can be grouped with two terms, non-signaling, as we know it today, and the emerging fast-sequenced non-signaling.

Signaling to non-signaling

Non-signaling test modes often evolve from existing signaling test modes and some call this entry into non-signaling reduced signaling. During this transition, chipset firmware is designed to reduce the types of channels needed for the device to synchronize to a DL signal. The device still needs to receive appropriate DL traffic signals as well as broadcast or pilot channels for some level of synchronization or control as if it were from a base station or signaling test equipment. Because of this, the initial non-signaling test modes offer less potential for reducing test times when compared to advanced fast-sequenced non-signaling test modes that do not require synchronization. The capability to create complex waveform files is required with non-signaling test equipment to simulate base station DL signals. Additionally, a means to orchestrate between the test equipment and chipset is required throughout the process of DL sync, setting up transmission, and subsequent measurements.

Fast-sequenced non-signaling

The progression from signaling through early non-signaling towards fast-sequenced non-signaling is typically tied to chipset development and is therefore generally a gradual process (**Figure 2**). Fast sequenced non-signaling removes the need for any control via the RF signal from the test set, simplifying RF test development and subsequently shortening the ramp to production volume testing while reducing test times. Where a new chipset is designed for a new technology such as Long Term Evolution (LTE), there is an opportunity to aim the design of the test mode towards fast-sequenced non-signaling mode from the outset.

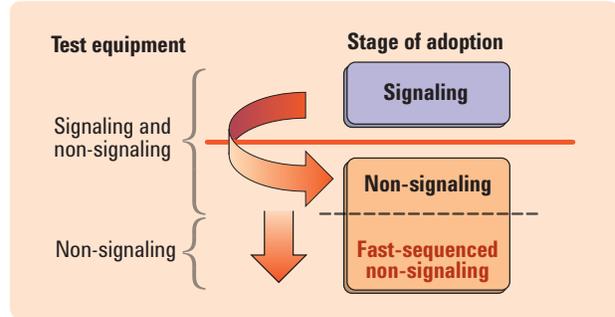


Figure 2:

The proprietary nature of test modes makes integration into manufacturing unique for any given example

By understanding the distinction between early non-signaling and fast-sequenced non-signaling test modes, design and test engineers can better leverage the advantages of non-signaling test techniques. This knowledge can be used to expedite the speed and extent to which a device can be tested. It also allows for collaboration with test vendors to determine the best choice of test equipment given the device test mode in question. New non-signaling test equipment is set to play an increasing role in this choice.

Realizing Savings

Calibration

As discussed previously, the test techniques employed over the years within calibration have been proven to reduce test time and cost of cell phone manufacture.

An example was the introduction of power ramp measurements at the GSM frame rate in a single channel within OBTs. Similar and subsequent enhancements included support for EDGE, W-CDMA, and cdma2000 1xRTT. These types of measurements required the cell phone to provide a predefined test mode power ramp at each calibration channel. A further extension to this was to have the test equipment measure phase and amplitude versus time to increase the flexibility of the power measurement ramping capability.

Designers of OBTs continue to seek test time reductions through the use of specific calibration techniques that include simultaneous testing of both the transmitter and the receiver, such as with fast device tune. This requires chipsets to allow the cell phone to output and receive at a series of frequencies and levels so that the device transmitter and receiver can be calibrated simultaneously. In this area, measurements and applications have been provided to support leading chipsets.

Verification

Verification test is now the next frontier for non-signaling test mode development to allow fast sequenced test to reduce test time. Similar to calibration techniques, the aim is also to calibrate both transmitter and receiver in parallel. What is different from calibration however is that the measurements typically include modulation quality and return a great number of measurements from the same analyzed data. There also exists the potential to test across multiple modes (formats) in one test mode predefined sequence.



The most cost-effective way to manufacture next-generation wireless devices

5

Test Case	Mode	Power (dBm)	Modulation	Frequency (MHz)	Bandwidth (MHz)	Power Spectral Density (dBm/MHz)	Occupied Bandwidth (MHz)	Modulation Error Rate (MER)	Bit Error Rate (BER)	Packet Error Rate (PER)	Throughput (Mbps)	Latency (ms)	Other Metrics
1	EDGE	12.784	1	25	1250	0.1	125	19	1000	10	0	10	1000
2	EDGE	12.784	1	25	1250	0.1	125	19	1000	10	0	10	1000
3	EDGE	12.784	1	25	1250	0.1	125	19	1000	10	0	10	1000

Test Evolution

For a given format in a given chipset, a test engineer should be able to use **Figure 3** to identify the current stage of the non-signaling test mode evolution. In some circumstances, this may point to an area in the table that overlaps the two categories, which is logical since device modes are developed over time and are proprietary.

Receiver test

For receiver verification testing, the DUT must receive a suitable DL signal from the test equipment so that a bit error rate (BER) measurement can be made. As shown in **Figure 3**, there are two mechanisms for reporting BER: loopback BER and single-ended BER.

Loopback BER testing sends data to the device on the DL, which is looped back to the tester via the UL. The tester then can post-process BER for comparison to the data sent originally on the DL. When loopback BER is used for receiver test, the DL signal normally requires full channel coding. DL requirements for channel coding are linked with receiver verification test requirements. As indicated in **Figure 3**, the degree to which devices must be able to decode key pieces of channel-coding information on the DL depends upon the test mode.

Taking cdma2000 as an example, the specified convolution encoding, symbol repetition, and interleaving may be required within the synch channel for correct coding of the synch channel message data. This data is important for replicating real-world system synchronization and fields such as the system identification (ID).

Non-signaling devices may use a test mode for loopback BER and are likely to have adopted optimizations already in use within signaling test. For example, the 3GPP 44.14 standard specifies various internal types of loopback for the purposes of receiver sensitivity testing of GSM- and GPRS/EDGE-capable devices. Cell phone manufacturers can choose to use loopback Type C for GSM where the mobile sends back its received data stream to the tester without taking it through channel decoding.

Alternatively, BER measurements can be obtained by the device reporting the data directly over the chipset control. This is typically referred to as single-ended BER. Next generation non-signaling test equipment uses arbitrary waveform files to transmit across a test sequence to provide a continuous and frame-coherent DL signal to the device. With single-ended BER, the channel coding is either full or partial depending upon the test mode.

Figure 3 shows single-ended BER in the non-signaling and fast-sequenced non-signaling categories. For single-ended BER, the test mode must account for use of arbitrary waveform generator files. This means that the specific data pattern that the device must receive on the DL often is simplified for easier and faster computation. The test mode also might need to include the capability to resynchronize to a repeating data pattern caused by the repetition of the waveform file.

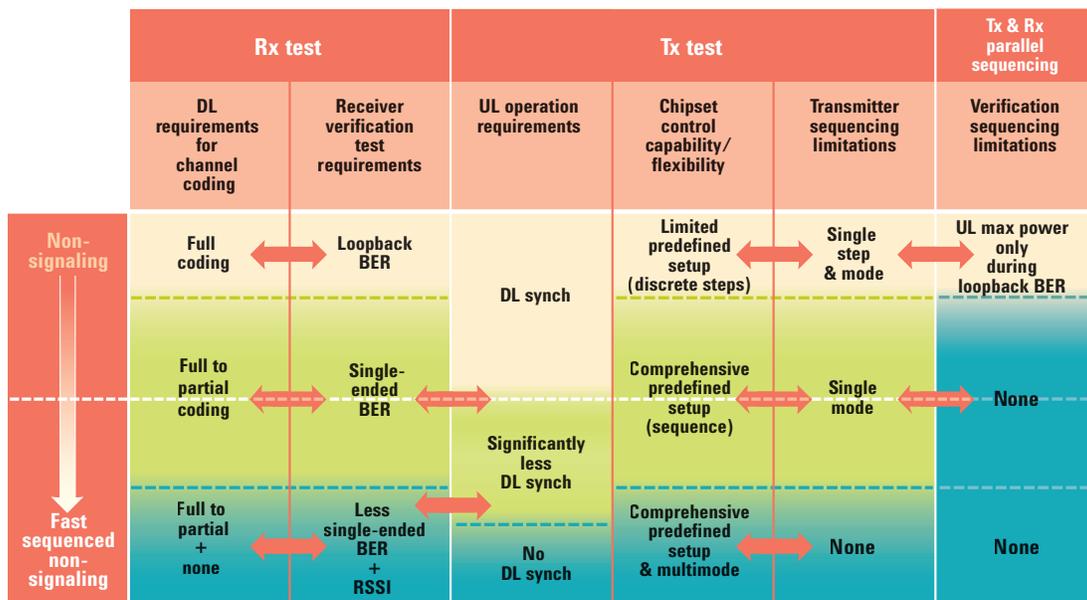


Figure 3: Comparison of non-signaling test modes and their evolution within verification test

Typically, a fast-sequenced non-signaling chipset mode is less strict about the specific requirements of the DL signal, and channel coding may not be required for signals that only need to be spectrally correct on the DL. Fast sequenced non-signaling uses a combination of single-ended BER and received signal strength indication (RSSI). In the case of RSSI, there is no need for any channel coding.

BER measurements, whether single-ended or loopback, are one of the key bottlenecks in a test plan. If there is a way to reduce the amount of BER testing without compromising on quality, then this would be highly beneficial to the test time.

Transmitter test

Figure 3 indicates the requirements that must be met for the UL to be active within the test mode for transmitter testing to occur. This is primarily about the synch requirements on the DL but also is related to the channel-coding requirements. The DL synch requirement determines whether the cell phone needs the full broadcast within the DL for subsequent transmission on the UL, or no signal at all on the DL because the chipset control is the only prerequisite for the UL operation.

Once synchronized via a DL signal, the cell phone can be controlled to loopback the DL traffic channel onto the UL. This is where the DL channel coding comes into play, for example, the DL transmit power control (TPC) bits which subsequently control the UL power transmitted from the cell phone. A gradual reduction in synch requirement occurs as devices move toward the fast-sequenced non-signaling category.

A fast-sequenced non-signaling device allows the UL to be transmitted without the need to first synch on the DL. This makes the device much more flexible and easier to integrate into a predefined sequence-based test.

Independent UL control is possible through focused chipset design work, but the approach is not without its challenges. For example, with GSM, without a DL for frequency correction, the UL transmit signal may not be as accurate and exhibit frequency error. For this reason, within **Figure 3** the fast-sequenced non-signaling category still indicates that synchronization may be required.

Transmitter sequencing

The columns “Chipset control” and “Transmitter sequencing limitations” under the heading “Tx test” in **Figure 3** denote the link between the chipset control capability and the resultant capability to accommodate transmitter verification sequencing test. The test mode may contain the capability to carry out predefined single steps but may not be able to sequence completely unless sufficient control is included.

This control capability increases toward the fast-sequenced non-signaling category to the extent that sequencing can take place across multiple radio formats. Once fast-sequenced non-signaling is realized, limitations are removed.

Transmitter and receiver parallel sequencing

When sequencing both the cell phone’s transmitter and receiver in a fast-sequenced non-signaling mode, single-ended BER enables the UL test and DL test to be truly independent, allowing test development of simultaneous test of UL and DL. For example, the cell phone could be doing inner-loop power control on the UL while measuring single-ended BER on the DL. This contrasts with loopback BER limitations where the cell phone must transmit back on the UL at maximum power.

Advances in Verification Test

Today, test engineers seek to predefine output from the cell phone so that verification test time can be minimized. While this is being achieved by the inclusion of proprietary test modes and building upon the knowledge gained from calibration test modes, it is also leading to more complex predefined data patterns. These are often referred to as verification test “sequences,” or “sweeps,” and apply to both the device receiver (output from the test equipment) and transmitter chain (input to the analyzer of the test equipment).

Defining and enabling a predefined sequence within the test mode is one part of the implementation that the chipset designer must complete before the test engineer can make use of it. This requires minimizing the need to “set and measure” continuously via chipset control (regardless of whether the test stage is calibration or verification), due to the time and cost penalty associated with this methodology. The “set” refers to associated device setup before each test, primarily the setup and preparation of the device test mode. The “measure” refers to sending the test equipment commands to set the equipment up, performing the measurement, and returning the result for each test (**Figure 4**).

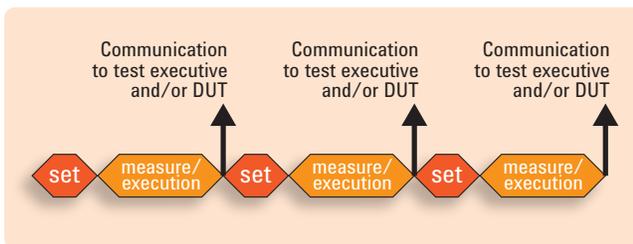


Figure 4:

A “set” and “measure” approach to verification test sequencing

A non-signaling test mode contains a range of controls over which the engineer can ask the device to respond or provide information back to the controlling test executive. However, while there might be enough capability to produce the required output, if the test executive must communicate frequently with the device over the duration of the defined sequence then the benefits of the entire sequence can be undermined. This is because the test executive must continually setup and communicate with the device which is time consuming.

An example of this is best demonstrated by a controlling application programmable interface (API) being called in the test executive to control a device in a GSM test mode. The following pseudo code demonstrates how the test engineer might setup the device to synchronize to a downlink signal. Once complete the phone transmits on the UL at maximum power while obtaining a count of BER in parallel.

Finally, the device is then asked to switch to another channel:

```
DUT_GSM_synch(channel);
while (DUT_GSM_synchcomplete() == 0)
{
    wait(5);
}
DUT_GSM_TX(maxpower);
DUT_GSM_startBER(bits);
while (DUT_GSM_BERcomplete() == 0)
{
    DUT_GSM_calcBER();
}
DUT_GSM_stopBER();
DUT_GSM_readBER();
.
.
.
DUT_GSM_TX(channel2);
.
.
.
```

The key point here is that the non-signaling test mode exists to control the phone in order for the test engineer to request the required non-signaling capability, but this requires eight API calls to the device (for just one channel). This includes the need to read back the status of the device for completion of synchronization, at the completion of BER, and for the calculation of BER results (for reading into the test executive).

Subsequently, when attempting to pace the device with test equipment, it becomes more difficult because the device state must be known and accounted for before determining the control of the test equipment. The result is that the test sequence is no longer predetermined in nature, which reduces the effectiveness of the device's non-signaling test mode for test purposes. In effect this cannot be sequenced in one sweep and must be executed as a series of sequential steps, not a sequence.

Conclusion

Non-signaling manufacturing test

Non-signaling test modes benefit most from test-speed improvements by using next-generation non-signaling test equipment. Next-generation non-signaling testers, remove limitations on band, cellular format, channel, power range, and time slot that may have been enforced within signaling.

Focused non-signaling test equipment, therefore, can pave the way for adoption of new fast sequenced non-signaling test modes and ultimately provide new and faster test techniques. They are also capable of comprehensive debugging of non-signaling sequences being designed for manufacturing using format specific tools. Similarly, a well-featured source in an OBT can provide test coverage like a separate signal generator. For sequencing purposes, specific tools can be provided to drive the source across a sequence simultaneously with the analyzer.

Non-signaling test tools

Since the technical capabilities of a device's non-signaling test modes drive the requirements for the test equipment, test vendors also must provide tools that simplify the adoption of non-signaling test, particularly in cases where a cell phone manufacturer is using a variety of chipsets from a number of chipset vendors.

In next-generation non-signaling test equipment, arbitrary waveform files are used to transmit signals to devices. This is a significant change in how test equipment provides a DL, and both R&D and manufacturing test engineers, therefore, need easy to use, comprehensive signal creation tools to create standard-based DL test waveforms that can handle the sometimes complex chipset test-mode requirements. For the R&D engineer, the tools must provide wide coverage. For the manufacturing test engineer, the tools should offer a user interface that makes it easy to select the key signal parameters for a test. Test vendors can offer these types of focused software packages by again collaborating with chipset vendors and cell phone manufacturers to capture key requirements and implementing them as parameters in the user interface. Additionally, a means to create the test sequences that coordinate between the test equipment and chipset is required throughout the process of DL sync, setting up transmission, and subsequent measurements.

Next-generation, non-signaling test equipment solutions that support fast-sequenced, non-signaling test are required to pave the way for adoption of new non-signaling chipsets and ultimately provide new and faster test techniques. This next generation test methodology makes use of proprietary calibration and verification non-signaling test modes. Moreover, such device test modes can be executed more efficiently when there is no need for a test executive to continually interact with a device API and test executive, allowing the test equipment to execute a sequence from start to finish minimizing bottlenecks in device communication.

Related Literature

The EXT: The Most Cost-Effective Way to Manufacture Next-generation Wireless Devices,
Brochure, Literature number: 5990-7156EN

E6607A EXT Wireless Communication Test Set,
Configuration Guide, Literature number: 5990-4987EN

Make the Move to Non-signaling Test with the EXT,
Flyer, Literature number: 5990-4988EN

Solutions for Manufacturing Next-generation Wireless Devices,
Application Note, Literature number 5990-7209EN



Agilent Email Updates

www.agilent.com/find/emailupdates

Get the latest information on the products and applications you select.



www.lxistandard.org

LAN eXtensions for Instruments puts the power of Ethernet and the Web inside your test systems. Agilent is a founding member of the LXI consortium.



Agilent Advantage Services is committed to your success throughout your equipment's lifetime. To keep you competitive, we continually invest in tools and processes that speed up calibration and repair and reduce your cost of ownership. You can also use Infoline Web Services to manage equipment and services more effectively. By sharing our measurement and service expertise, we help you create the products that change our world.

www.agilent.com/find/advantageservices



www.agilent.com/quality

www.agilent.com

www.agilent.com/find/E6607A

www.agilent.com/find/ext

For more information on Agilent Technologies' products, applications or services, please contact your local Agilent office. The complete list is available at:

www.agilent.com/find/contactus

Americas

Canada	(877) 894 4414
Brazil	(11) 4197 3500
Mexico	01800 5064 800
United States	(800) 829 4444

Asia Pacific

Australia	1 800 629 485
China	800 810 0189
Hong Kong	800 938 693
India	1 800 112 929
Japan	0120 (421) 345
Korea	080 769 0800
Malaysia	1 800 888 848
Singapore	1 800 375 8100
Taiwan	0800 047 866
Other AP Countries	(65) 375 8100

Europe & Middle East

Belgium	32 (0) 2 404 93 40
Denmark	45 70 13 15 15
Finland	358 (0) 10 855 2100
France	0825 010 700*
	*0.125 €/minute
Germany	49 (0) 7031 464 6333
Ireland	1890 924 204
Israel	972-3-9288-504/544
Italy	39 02 92 60 8484
Netherlands	31 (0) 20 547 2111
Spain	34 (91) 631 3300
Sweden	0200-88 22 55
United Kingdom	44 (0) 131 452 0200

For other unlisted countries:

www.agilent.com/find/contactus

Revised: June 8, 2011

Product specifications and descriptions in this document subject to change without notice.

© Agilent Technologies, Inc. 2011
Published in USA, October 27, 2011
5990-7498EN

cdma2000 is a registered certification mark of the Telecommunications Industry Association.

WiMAX, Mobile WiMAX, WiMAX Forum, the WiMAX Forum logo, WiMAX Forum Certified, and the WiMAX Forum Certified logo are US trademarks of the WiMAX Forum.



Agilent Technologies